



## Installation Guidelines for MV Agusta Brutale 2006-2009

- 1) Read your Damper Manual for initial settings on the controls. A separate page describes each valving circuit control. Start at softer settings.
- 2) Be sure the tower pin does NOT make contact with the bottom of the damper. The tower pin height is adjustable.
- 3) Before riding, turn the bars from full lock left to right and be sure your cables are free to pivot and nothing restricts the full turning radius.
- 4) If you have any questions on anything, just call us, we are here to help! 818 248-6747.

