



2625 Honolulu Ave · Montrose, CA 91020 · 818 248-6747 · Fax: 818 248-4529
www.scottsonline.com · e-mail: sales@scottsonline.com

HONDA TRX 250 1986-89 INSTALLATION INSTRUCTION SHEET:

Tools needed:

5mm and 6mm Allen wrenches. 8mm, 10mm & 12mm sockets.


#2 Phillips screwdriver and a large flat blade screwdriver and hammer.

Average Installation time is approximately 45 minutes to 1 hour depending on your skills.

- 1) Remove the seat, gas tank cowling cover and front fender.
- 2) Loosen the (4) steering pillow block bolts. You will need a flat blade screwdriver to flatten out the lock tabs that keep the stock bolts from backing out. Picture of this area is on page 2.
- 3) Install the new frame bracket on the rider side of the steering block as per the photos on page 2. Be sure the bottom edge of the tower upright is resting on the frame. Align the frame bracket so the tower is straight with the steering column. Tighten the 4 steering block bolts and re-establish the lock tabs with the flat bladed screwdriver.
- 4) Remove the (4) handlebar mounting bolts and the upper halves of the bar mounts.
- 5) Remove the upper headlight mounting tabs that wrap around the bars (see photo).
- 6) Install the new handlebar clamp provided as per the photo and keep the space between the upper and lower barclamps equal, both front and back.
- 7) Remove the sticker from around the tower pin, grease the portion that will be in the tower and insert it. It is designed to float and needs no retaining devices. Keep it greased so it's allowed to float during use.
- 8) Install the Stabilizer onto the new barclamp using the (2) 6 x 20 Allen bolts provided. The flats on the tower pin match and slide into the slot in the damper linkarm.
- 9) Re-install the headlight mount into the holes provided in the handlebar clamp using the (2) stock 6mm bolts to attach the headlight bracket to the barclamp.
- 10) Re-install the fender and cowlings in the reverse order that you removed them in.
- 11) Your finished installation should look like the picture provided. Now go and enjoy your new toy. We are sure you will be impressed with the results.
- 12) Read the Owners Manual for control knob features and how to adjust.
- 13) If you have any questions, please feel free to call, as we want to help you. 818 248-6747.



Steering "pillow block"

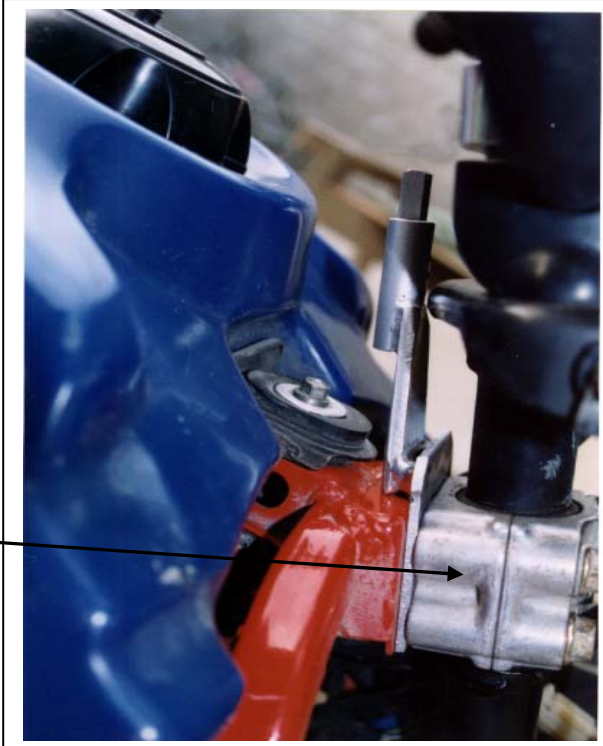

Remove these parts, not needed any longer

New headlight mounting position

