



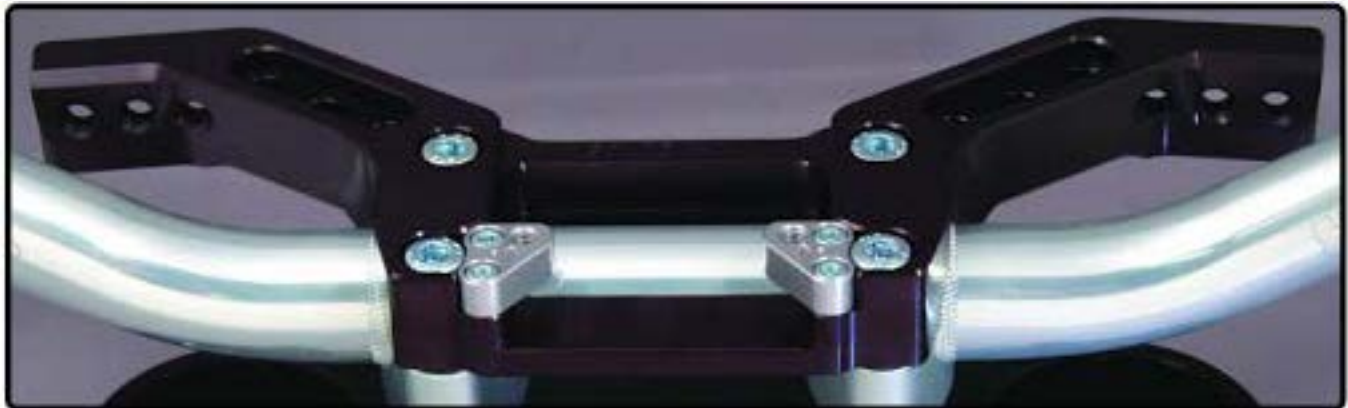


Scotts Steering Stabilizer Hand Guard Mount



USE Loctite or Thread Locking Agent on M4 x 10 Bolts

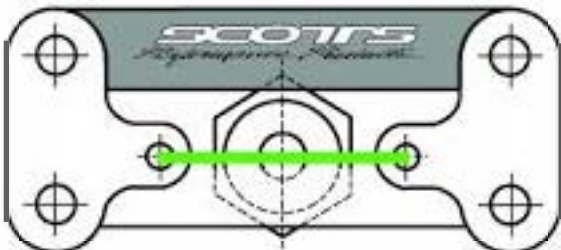

Correct Alignment

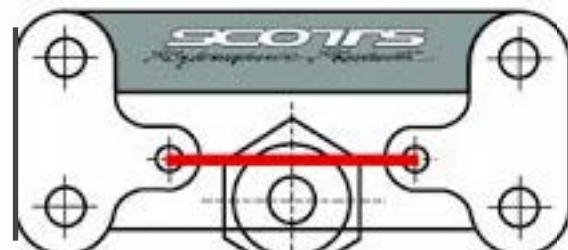

Incorrect Alignment

M6 Threaded Mounting Holes Must Be Centered Over Steering Stem

**READ APPLICATIONS GUIDE TO DETERMINE CORRECT
NUMBER TAB FOR YOUR MODEL AND HANDLEBAR POSITION**

P: 818 248-6747 - www.scottsonline.com

- 1) Install the Handguard Barclamp with the 4 bolts tightened evenly
- 2) Find your model on the application page (for example: 2017 450 RR)
- 3) Decide which position you want to run your bars in (example: position 4 is 41)
- 4) Find the tabs that match that position (they would be marked 41 in this case)
- 5) Install the tabs as per the pictures, readable from the riders view, using Loc-tite
- 6) Note the "correct alignment" pictures to insure it is correctly aligned

BCL-90 40 30-44 HANDGUARD TAB INSTRUCTIONS					
Year	BETA Models	Pos. 3	Pos. 4	Pos. 5	
11 - 17	350/390/450/498/520 RR 4 Stroke Models	34	41	N/A	
13 - 17	250/300 RR- 2 Stroke Models	30	36	44	
X-TRIG TRIPLE CLAMPS					
	MODEL	Pos. 2	Pos. 3	Pos. 4	Pos. 5
	Honda CRF 250/450R	N/A	30	36	44
	Yamaha YZ/YZF 125-450	N/A	32	39	N/A
	Kawasaki KXF 250/450	N/A	34	41	N/A
	Suzuki RMZ 250/450F	30	36	44	N/A
	KTM 125-500 All Models	30	36	44	N/A
	Husky 125-501 All Models	30	36	44	N/A
KTM & HUSKY HARD PARTS TRIPLE CLAMPS					
	KTM 125-500 All Models	30	36	44	N/A
	Husky 125-501 All Models	30	36	44	N/A
NOTE: This Bar Clamp Will Only Work With (1-1/8") Over Sized Handle Bars Position 1 is closest to the rider - Position 6 is furthest from the rider.					

